Bluetooth Microphone USER GUIDE






Android/IOS


1. Description

Bluetooth microphone is a kind of professional intercom equipm by connecting APP of smart phone or network radio, providing secure link, easy pairing on the go, and instant push-to-talk. The Bluetooth microphone, as wireless accessory, is flexible and cost-effective that gives users more mobility in their critical

2. Overviews of the Bluetooth Microphone



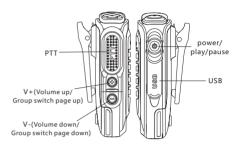

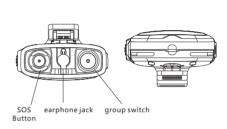

Press and hold for 3 sec.

Specification

3.Specification		
Bluetooth version	BT4.2	
Bluetooth protocol	HFP;HSP;A2DP;AVRCP;SPP	
Transmission range	>10m	
Music	>12hrs in maximum volume	
Talking time	≈14hrs	
PTT time	≈14hrs	
Standby time	>90hrs	
Working temperature	-10~50°C	
Storage temperature	-25~60°C	
Earphone jack	3.5mm,PTT supportive	
Battery	2000mA/3.7V	
Charging time	2.5h	
	-	

	Turn off	Press and hold for 3 sec.	
ON/OFF	Answer the call	Single click	
	Hang up the call	Single click	
	Decline	Double click	
	Push to Talk	Push to Talk	
PTT	Release to End	Release to End	
Encryption	Encryption Type	To receive APP command when radio is on	

Turn on

4.Button function					
Button	Description	Operation			
SOS button	sos	Press and hold for 2 sec.			
group switch (valid in 30 sec.)	Group switch page up	Single click V+			
	Group switch page down	Single click V-			
V+	Volume up	Single click			
V-	Volume down	Single click			

5.LED indicator

Description	Power indicator (red light)	Description	Power indicator (green light)		
Power on	Red light on for 3 seconds then off	Power on	Green light on for 3 seconds then off		
Power off	Red light on for 3 seconds then off		Green light on for 3 seconds then off		
Under charging	Red light on	Bluetooth match	Fast-blink		
PTT calling	Red light on	PTT called	green light on		
Low battery	Fast-blink	Full charged	green light on		
sos	green light on	Group Switch	green light on		

6.Operation

Answer the call
 Press Power button to answer phone when Bluetooth microphone has been activated.

● **Decline**Double click Power button to decline when there is call in.

Double click Power button to decline when there is call in.

Hang up the call

Single click power button to hang up the call.

Mp3 play and pause

Single click power button to play or pause MP3 music when connected.

Standby
Auto hibernation starts in 15min. When Bluetooth microphone has not activated.

 PTT function Bluetooth microphone supports PTT software such as Zello , Total control and etc. PTT button can be used when it is activated.

activated.

•Group switch
Single click group switch button with green light on and Single
click V+/V- to switch group when Bluetooth microphone is
activated for PTT software. End group switch by pressing PTT

• SOS
Press SOS button and hold for 2S when Bluetooth microphone is activated for PTT software. PTT starts after red light turns on and alarm goes off. It lasts for 20s.

For Bluetooth microphone firmware upgrade, TF card and download box are necessary. Corresponding software must be installed to burn the firmware to TF card. Please connect download box and Bluetooth microphone with USB cable. Press and hold the reset button (under the battery after opening the rear cover). Release reset button after the download box starts up. Successful download will be prompted in 10s. • Firmware upgrade

7.FAQ

• Failed to power on

It is probably low battery. Please charge for 2-3hrs.

No voice
Please check if volume sets too low. Please set the switch properly.

• Echo with speaker Speaker is too close to MIC. Please relocate the speaker.

Speaker is too close to MIC. Please relocate the speaker.

Disconnected with mobile phone.
Low battery.
Distance between Bluetooth microphone and mobile phone is over 10m. Shielding obstacle interferes.

Failed to match with mobile phone.
Clean up all matching information according to user guide. The Bluetooth microphone and the phone should be placed less than 1 m and re-start the match.

System halted

It may caused by high-strength radio frequency interference, such as GSM base station, airport radar and a high power TV transmission tower. Please reset and restart after leaving the interference source.

Abnormal working indicator
 A. Overuse or long period of non-use may cause low battery.
 It need to be charged for an hour and unplug and recharge
 B. Change a charging cable or charger.